



RC SKYWING



[Home](#) / Instructions

73 "-74" FULL BUILD MANUAL (安装手册)


Product description

**The contact surface of glue is rough
(胶水接触表面打磨粗糙)**





Servo installation (安装伺服舵机)

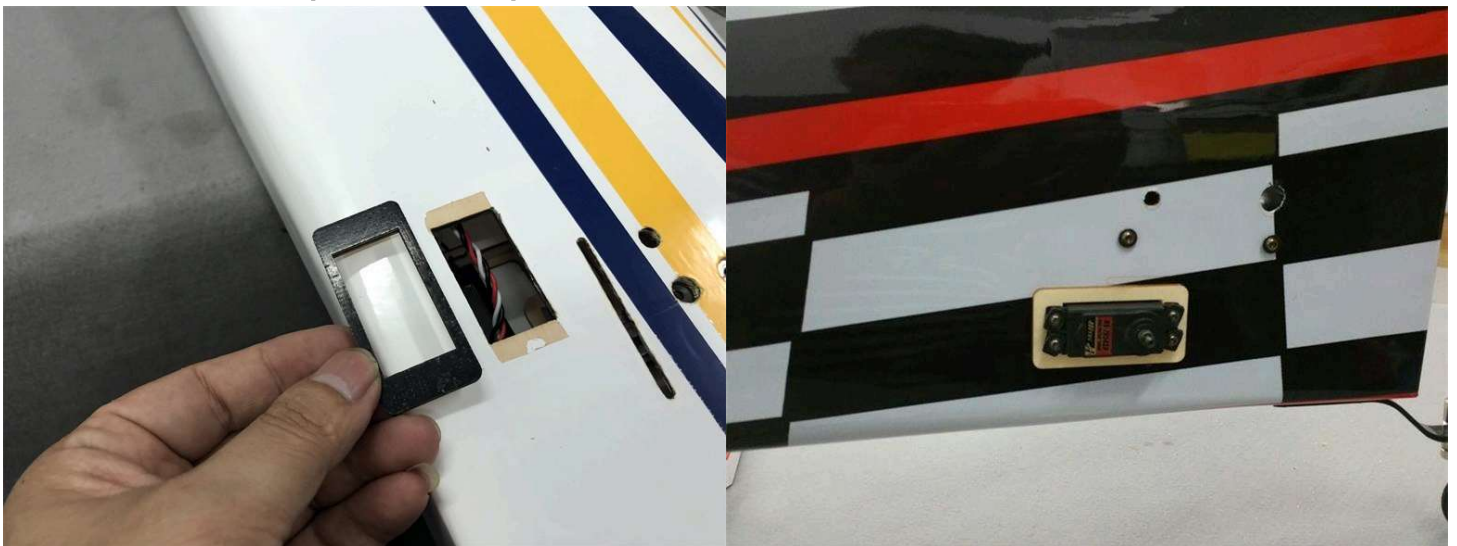








Install the lifting bracket
安装起落支架







Engine and fuel tank installation
引擎与燃料箱安装

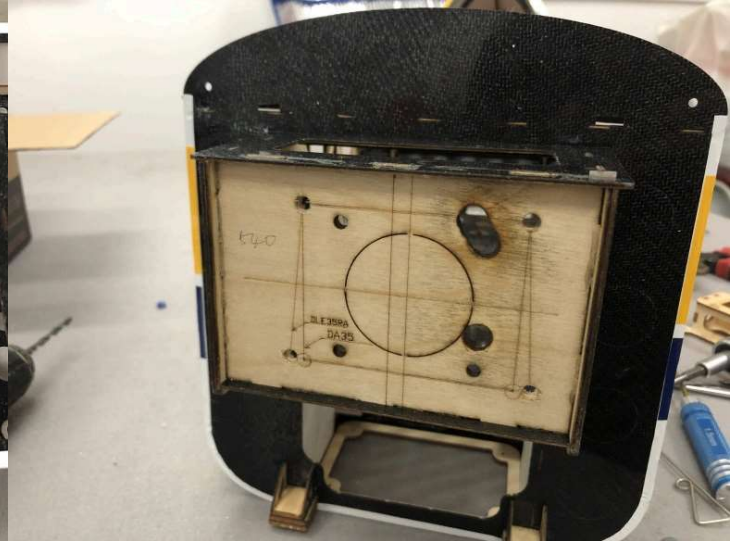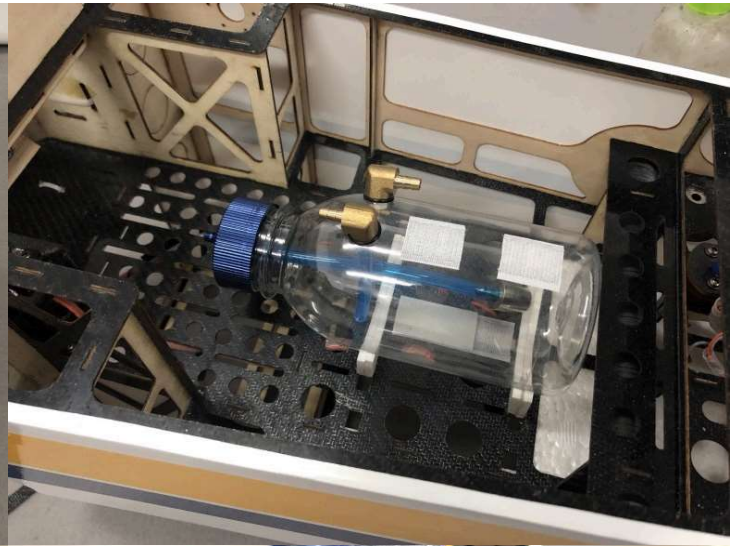

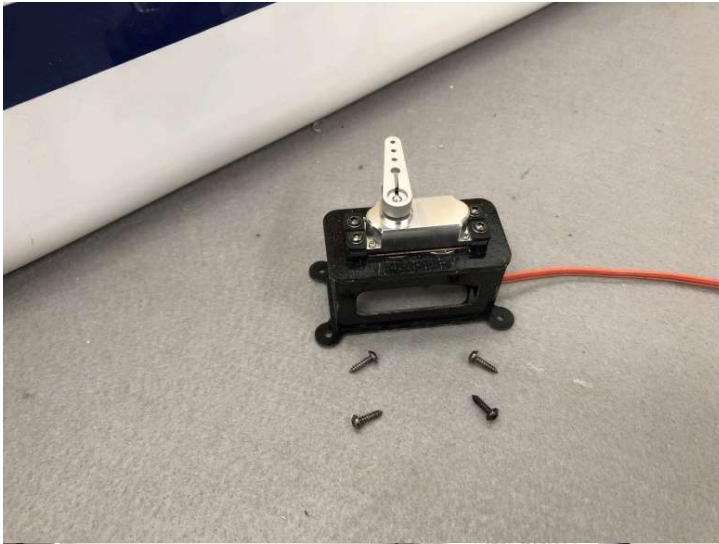

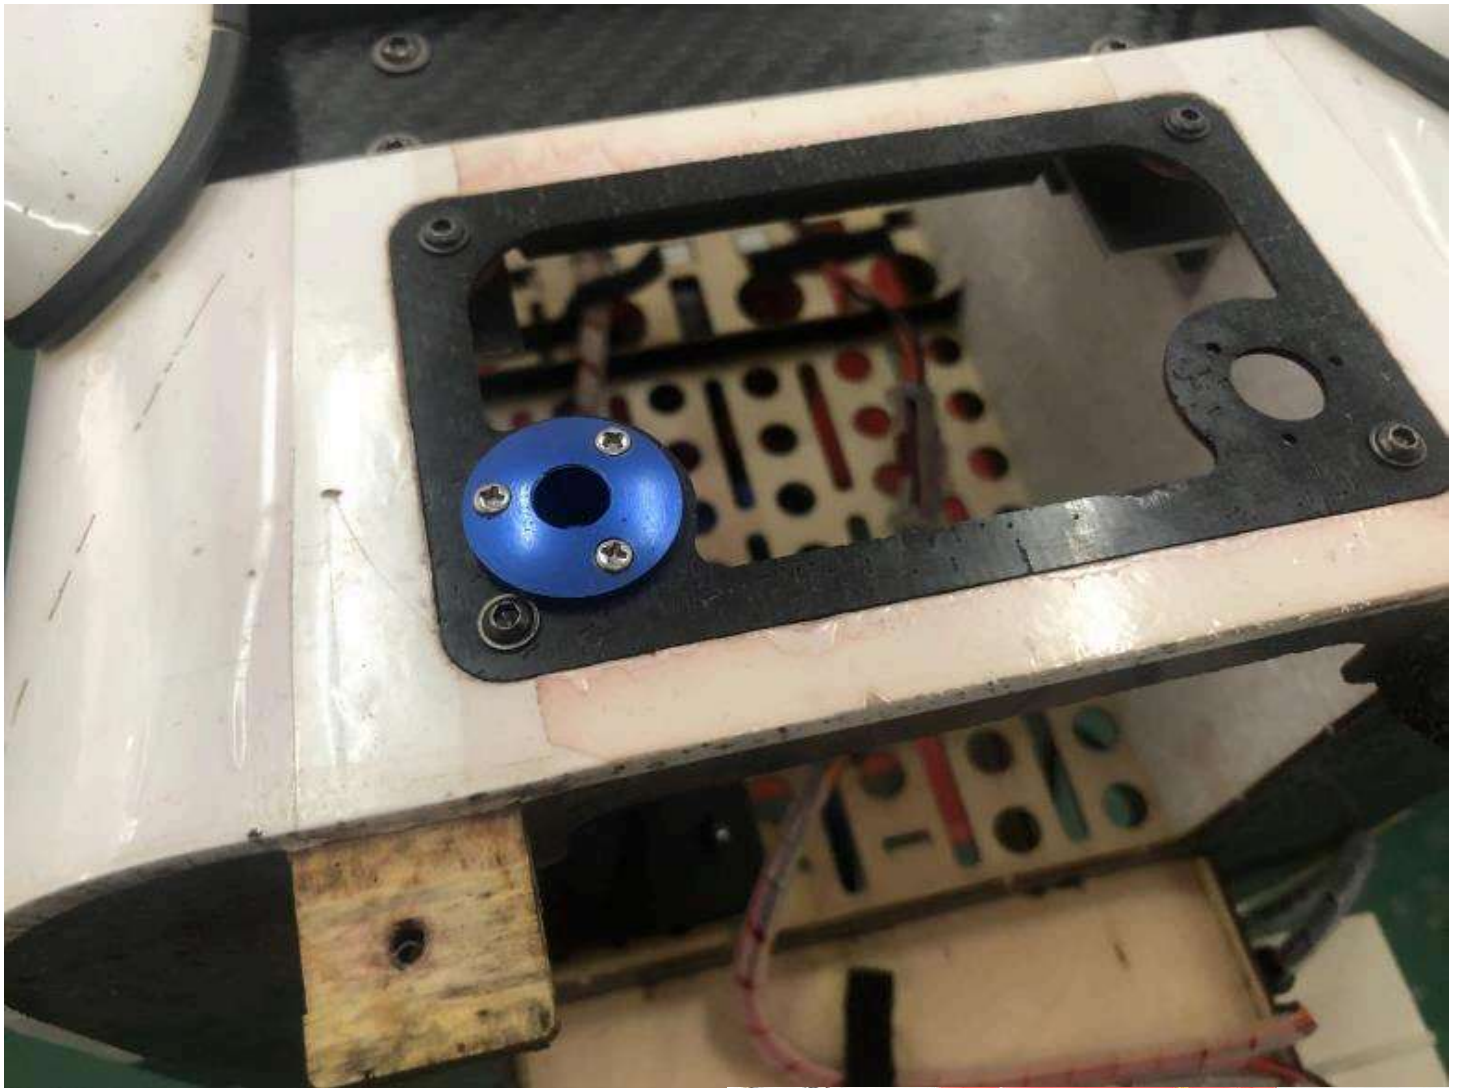

Schematic diagram of power interface
电源接口示意图

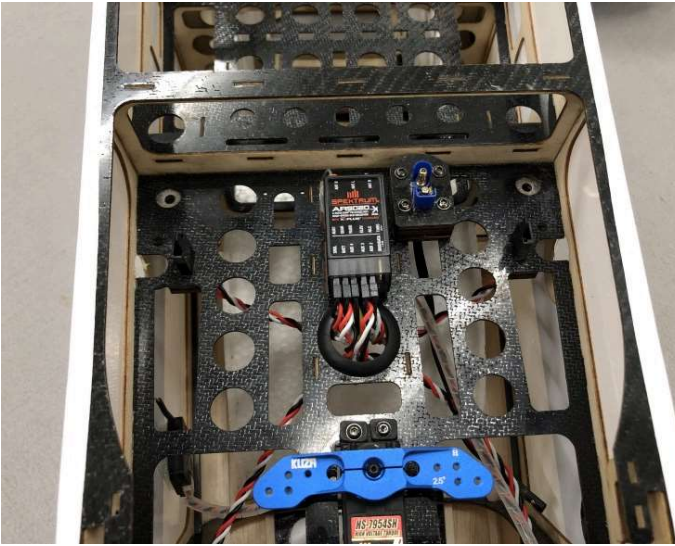


Prop chassis drilling, please pay attention to the chassis and spinner and prop outlet match

桨座底盘钻孔，请注意配合好桨和桨罩开口，确认再打孔！



Power installation reference

电动安装参考

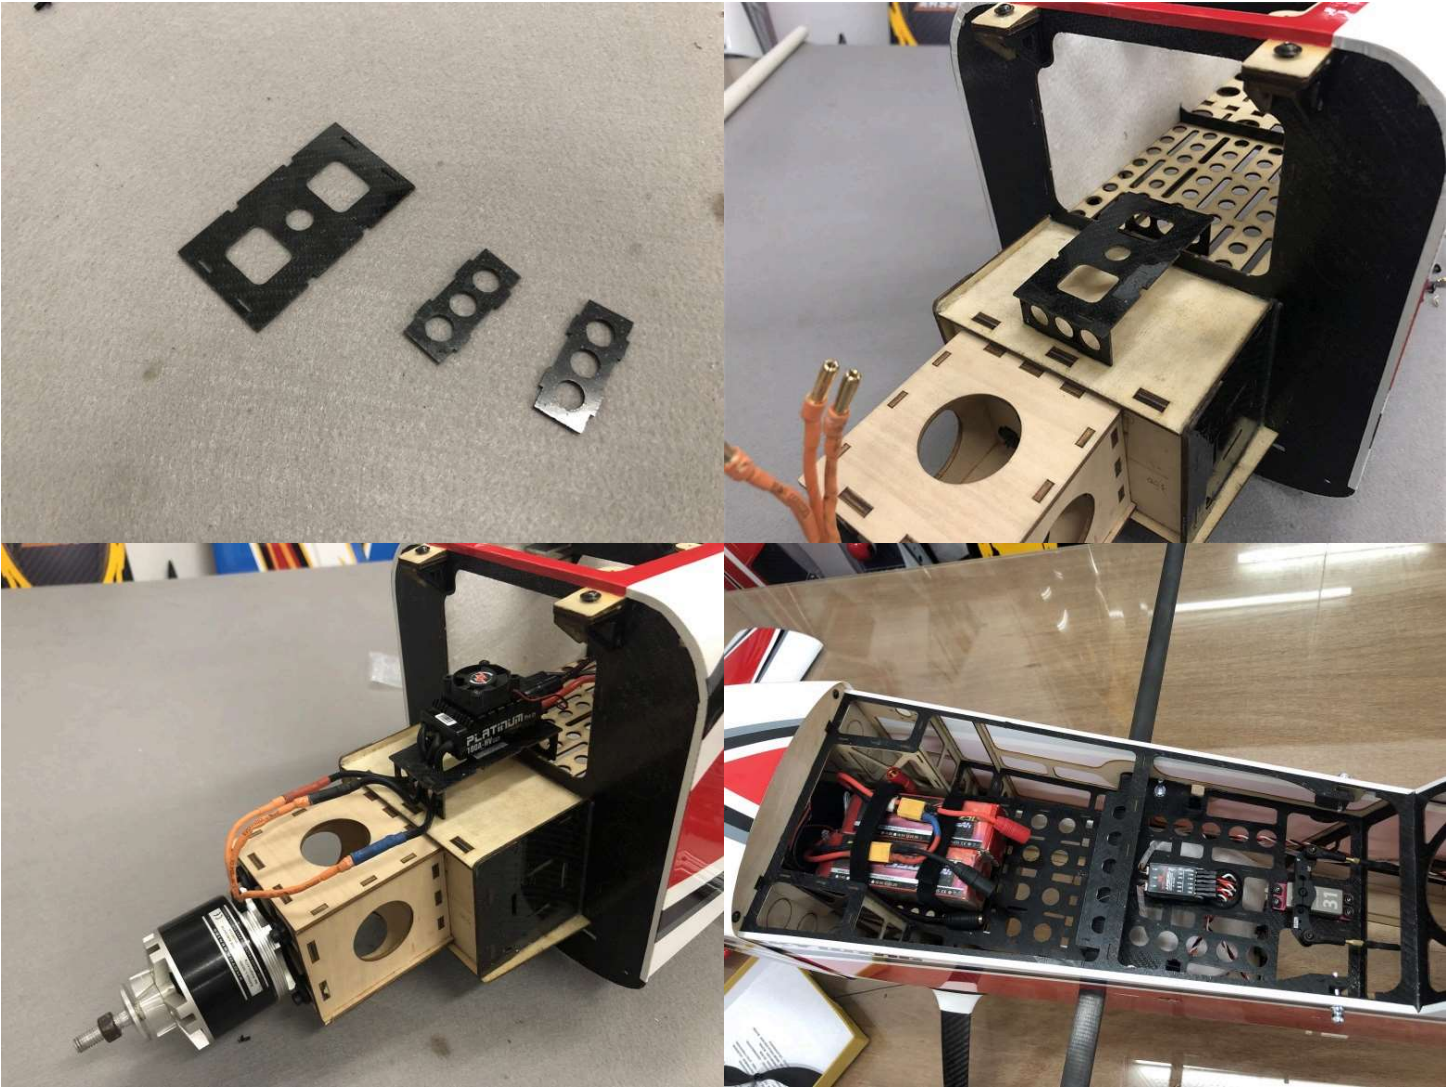

CG is in the center of the pipe(重心在管子正中心)

This position of center of gravity is for reference only, please choose the appropriate position according to your flying habits

(此重心位置仅供参考, 请根据自己飞行习惯来选择合适自己的位置)

©2024 RC SKYWING MODEL all rights reserved